 


# BSD Tools Ver 1.01.0

## Release Notes


### Main Window

- L7P Added index initialization function.

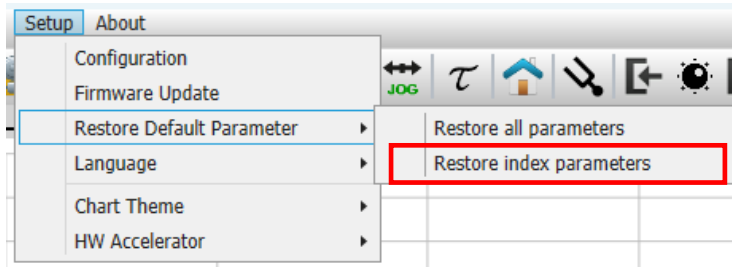

### Drive Information

- Added Product code, Revision, and Serial number for each drive. (Need to check applicable FW for each model)

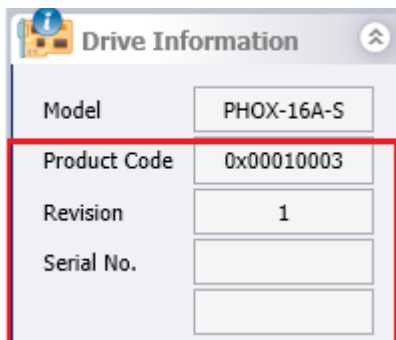

### Procedure

- Servo on operation from the procedure functions like "Manual Jog" or "PTP Move" is only available if the physical signal SV\_ON is OFF/FALSE.


note) Software Enable/Disable is only active if the physical SV\_ON input is OFF.

## Object Dictionary

- Fixed the inability to set 0x60FE when the Digital Output panel is activated.  
(Fixed the phenomenon of automatically calling the previous value during parameter setting)


0x60FE	0x0	Digital outputs	0x2	0x02	USINT	rw	0x0	0xFF
	0x1	Physical outputs	0x5000000	0x000000	UDINT	rw	0x000000	0xFFFFFFFF
	0x2	Bit mask	0x0	0x000000	UDINT	rw	0x000000	0xFFFFFFFF

- Added EEPROM save

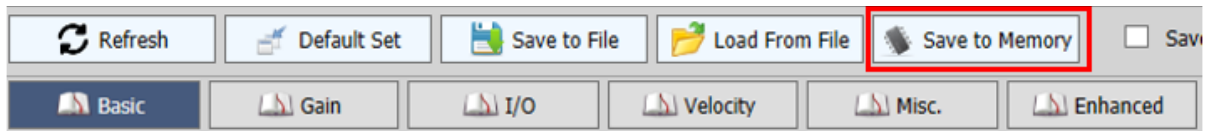

## Digital Output

- Corrected the setting error that occurred when executing Digital Output after executing BSD Tools for the first time.

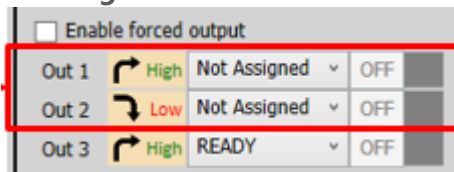

## Auto Phasing

- Add delay time to ensure step-by-step operation

## Miscellaneous

- Fixed the automatic program termination phenomenon under certain conditions.